


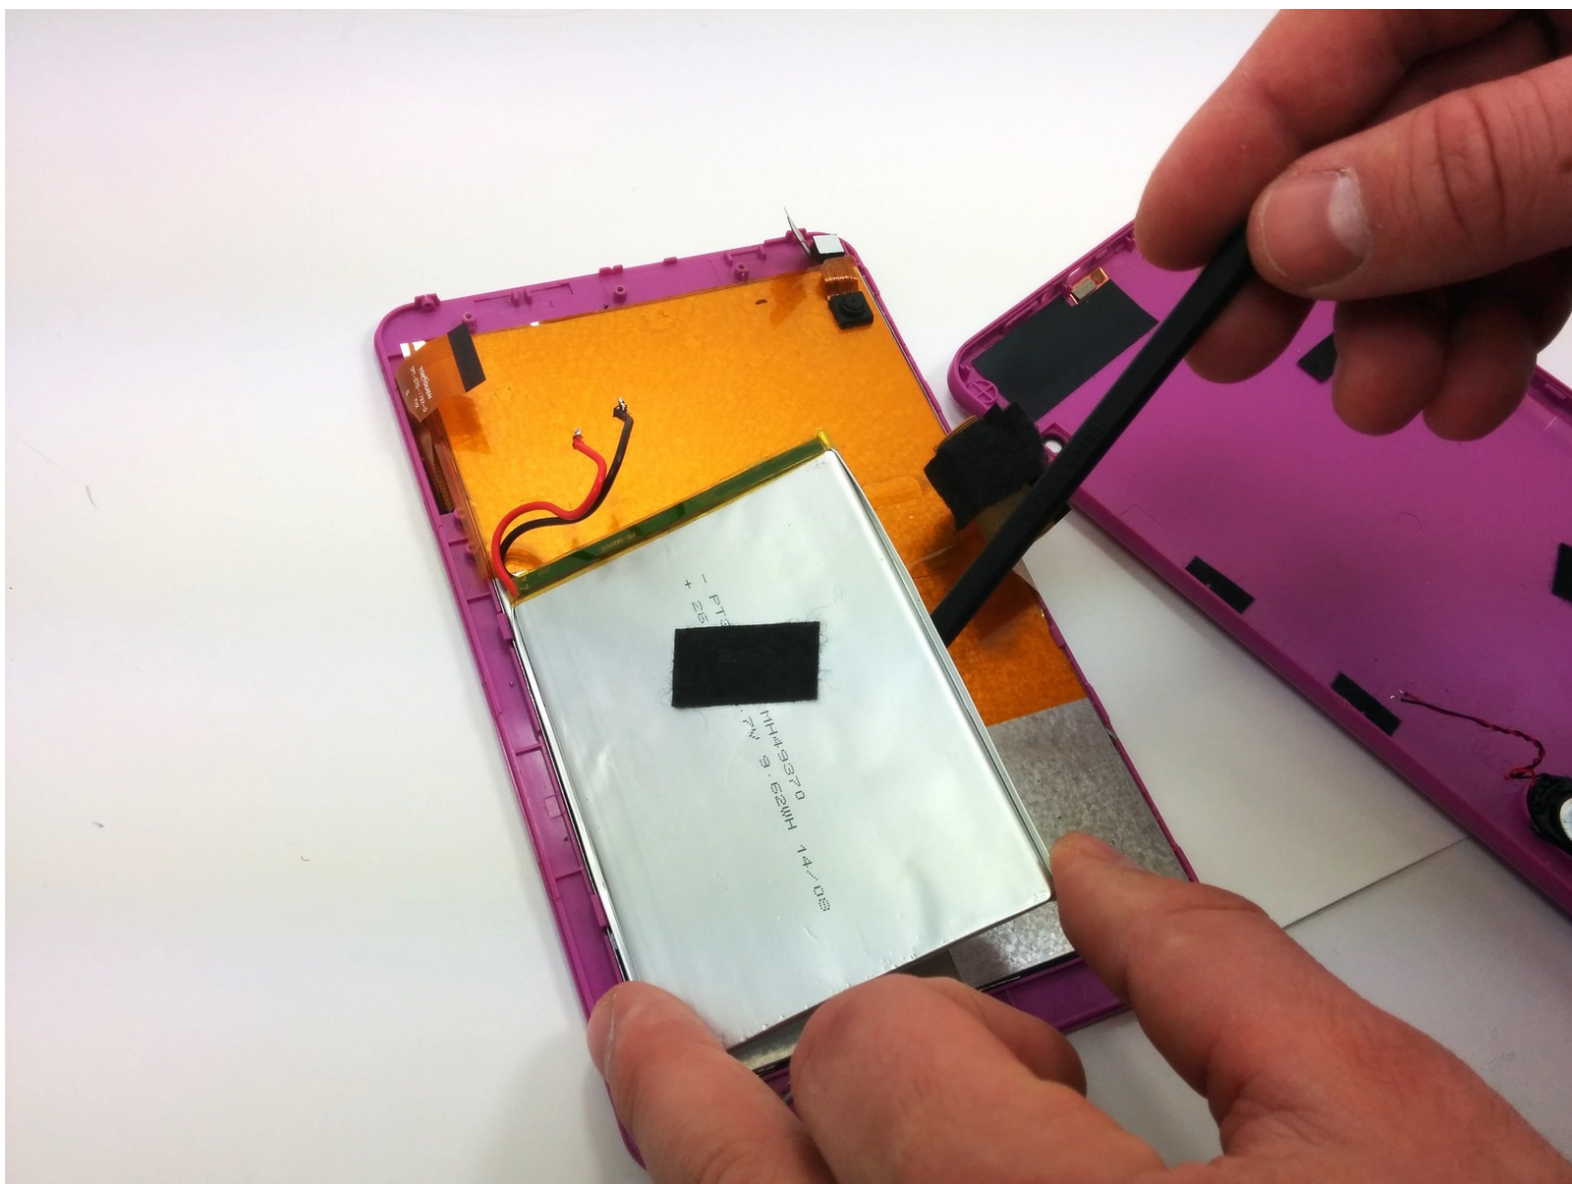

RCA RCT6272W23 Battery Replacement

Replace the battery on your device.

Written By: Stephen Radachy



INTRODUCTION

In this guide, you will learn how to replace the battery on your device.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Soldering Station](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Case



- Use a philips #00 screwdriver to unscrew both 4.064mm screws at the top of the device which hold it together.


Step 2



- Press a plastic opening tool into the space between the front and back portions of the case.
- Run it along the perimeter of the device to unhook the many plastic tabs.
- Gently pull both sides apart.


⚠ The speaker is connected to the back cover so be careful when separating

Step 3 — Battery

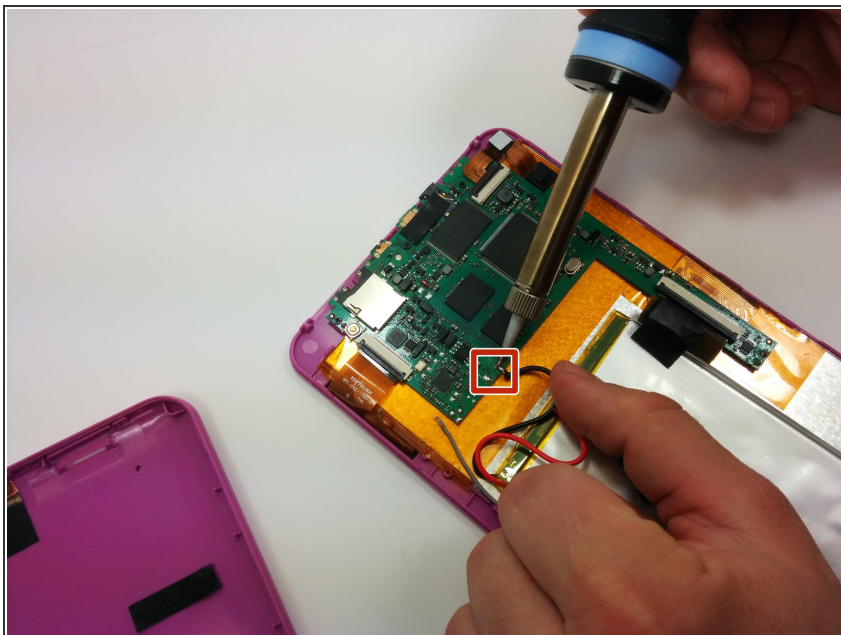

- Use a soldering iron to remove the soldered connections from the battery to the motherboard.
- ⚠ For your safety and to ensure a correct repair, be sure to exercise caution when using the soldering iron.
- ⓘ For more information about soldering, check out this [guide](#).

Step 4

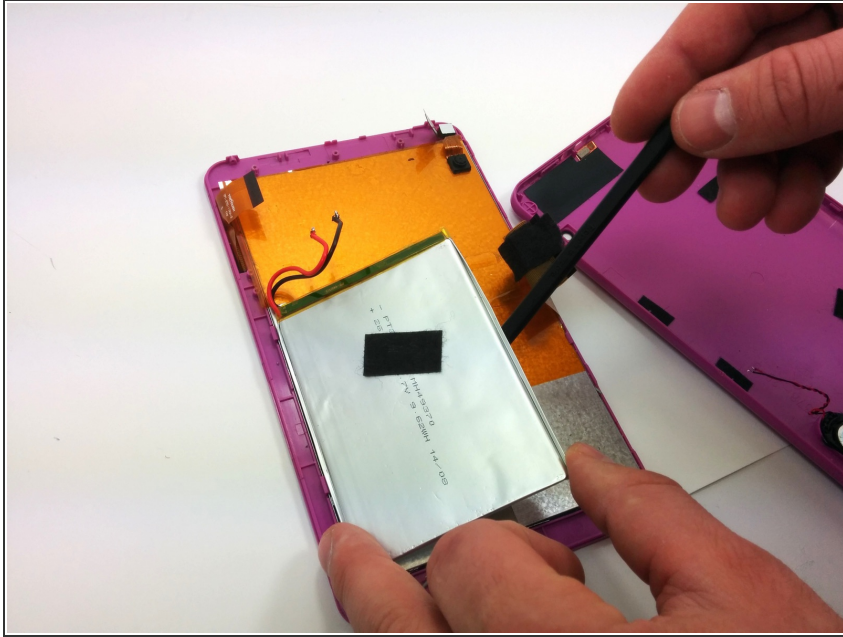

- Using a spudger, pry the battery off of the rest of the body
- ⓘ The battery is taped on with double sided tape. It would be a good idea to have another strip to reattach the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 11:22:21 PM.